

Aeromax 200K Keypad Programming

(For advanced programming, please refer to the Essex Keypad Manual included with this system)

User Code Operation

- 1) To open gate or door press your user **code** + #
- 2) (Example: (12345#) Note: When valid code is entered green LED will flash

Programming new user codes

- 1) Enter ***1** + **Master Code** (Default Master Code is 123) + #
(Example: *1123#)
- 2) Enter **1**#
- 3) **Enter User ID** (1-500) + #
- 4) **Enter User Code** (3-8 digits) + #
- 5) Enter # to complete programming for this user
- 6) To enter additional User Codes, return to step 3
- 7) If no additional users are to be added enter **** to exit programming and return to normal operation.

Changing Master Code

- 1) Enter ***3** + **Master Code** (Default Master Code is 123) + #
(Example: *3123#)
- 2) Enter **1** + # followed by new master code + #
(Example: (1#456#)
- 3) Enter ** to exit programming

Deleting a User by User ID

- a. Enter **4** #
- b. Enter the **User ID** (1 to 500) for the User to be deleted, followed by #
- c. To delete an additional User, return to Step b.
- d. If no more Users are to be deleted, enter * * and return to Step3,
or if you have completed all User Programming, enter second time to complete programming sequence and reset system to normal operation.